



FACTORYLUX®

IP54 PATRESS GLAND

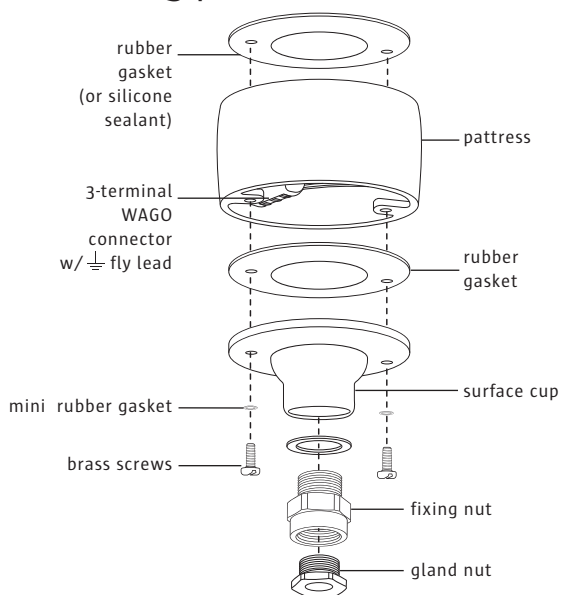

WHAT'S INCLUDED

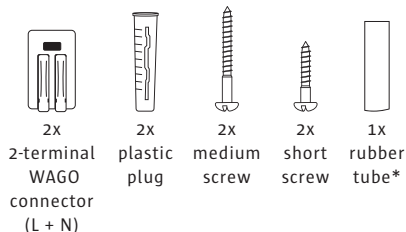

* required for other Factorylux Modular installations

TOOLS REQUIRED

- Drill + 6mm masonry bit
- 6mm flat head screwdrivers
- 24mm + 26mm open spanner

INSTALLATION NOTES

- Instructions are for pattress gland installation only
- Follow light fitting user instructions to complete installation
- If using fabric cable, we recommend using heat shrink to secure fabric sleeve but the gland must still clamp directly on to PVC or rubber in order to maintain IP rating

INSTALLATION (MASONRY SURFACE)

WARNING: Must be insulated and earthed in accordance with current regs

1. Drill 2 x 6mm holes x 30mm deep at 50.8mm centre spacings
2. Insert plastic plugs into holes
3. If mounting surface is smooth, place rubber gasket over fixing holes. If not smooth, use silicone sealant instead to create an impermeable seal between pattress and surface
4. Use screwdriver and supplied medium screws to fix pattress to the surface (alternatively, use supplied short screws only to fix to a timber surface)
5. Feed light fitting cable through clamp until at correct position
6. Grip fixing nut with 26mm spanner while tightening gland nut with 24mm spanner **CAUTION:** WAGO terminals should be relieved from strain or twisting
7. Use supplied WAGO connectors to make L, N and \perp connections (as per 'wiring diagram')
 - Flip integrated orange lever up to open position
 - Insert exposed conductor to stopping point
 - Return lever to closed position

YOUR PRODUCT

Thank you for purchasing this Factorylux product. It has been designed and assembled in the UK to give you many years of reliable service. Please read these user instructions carefully. All user instructions available to download at factorylux.com

WARNING

- Installation in accordance with current wiring and building regs and by a competent person only. Find an NICEIC registered contractor at factorylux.com
- Rated IP 54
- Compatible with min 3 core 0.75mm² CSA / min 4mm OD / max 8.4m OD sheathed cable
- Shut off power to the circuit before installation
- Ensure all rubber gaskets are in position, failure to install correctly could affect IP rating
- Always use fixings appropriate for the mounting surface (screws supplied may not be suitable)
- Gland must clamp directly on to PVC or rubber of sheathed cable
- Gland is not compatible with twisted fabric cable

STAY UP TO DATE

We post regular design and product information via social media and our blog. You can also contact us via instant support, twitter or email hello@factorylux.com



FACTORYLUX®


USER INSTRUCTIONS

INSTALLATION (MASONRY SURFACE) CONTINUED

8. Secure surface cup to pattress using brass screws, ensuring mini rubber gaskets are in place **CAUTION:** Over tightening could damage gaskets

WIRING DIAGRAM

WARNING: Ensure no loose copper strands

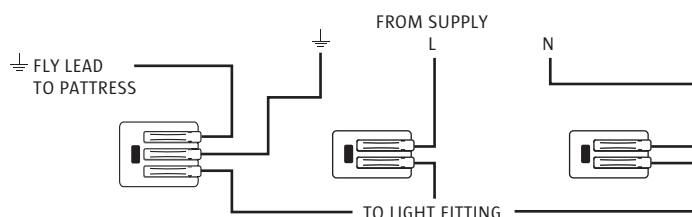

HANDLING & CLEANING

WARNING: Shut off power and allow to cool

- Cleaning products, scratching, abrasion, damp, oils, liquids etc may have a detrimental effect on finish

TROUBLESHOOTING

No user serviceable parts. In the event of failure, fault or damage contact our tech department via factorylux.com

Designed, assembled & tested in the UK

Revision 1602