



# FACTORYLUX<sup>®</sup>

## HOOK TYPE 5

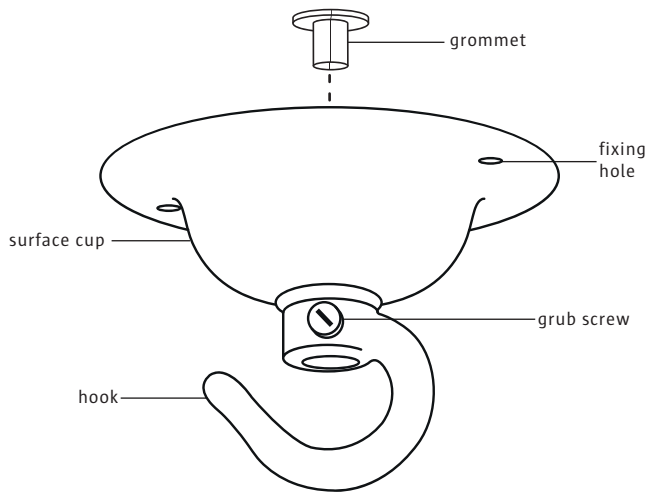

retro silver S281800 | vintage brass S281900 | antique bronze S282000

### WHAT'S INCLUDED

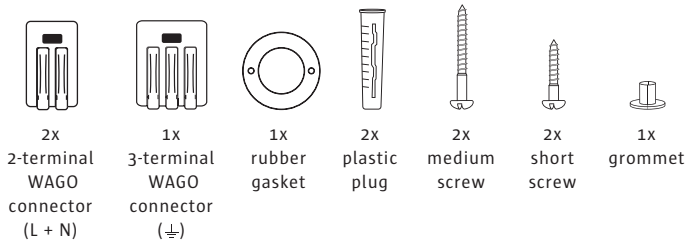

# FACTORYLUX<sup>®</sup>

## USER INSTRUCTIONS

### TOOLS REQUIRED

- Drill + 6mm masonry bit
- 6mm + 3mm flat head screwdrivers

### INSTALLATION NOTES

- Surface cup is not designed to house an electrical connection. We recommend using a pattress (available from factorylux.com). It is simpler, neater and safer
- Alternatively, a suitable non-combustible enclosure in a ceiling void is required to make a connection

### INSTALLATION (MASONRY SURFACE)

**WARNING:** Must be insulated and earthed in accordance with current wiring regs

1. Drill 2 x 6mm holes x 30mm deep at 50.8mm centre spacings
2. Insert plastic plugs into holes
3. Feed cable through hook and secure grub screw with 3mm screwdriver
4. Slide grommet (shoulder last) over cable end and position in internal neck of hook
5. Locate rubber gasket between surface cup and surface
6. Use supplied WAGO connectors to make L, N and ⚡ connections (as per 'wiring diagram')
  - Flip integrated orange lever up to open position
  - Insert exposed conductor to stopping point
  - Return lever to closed position
7. Use 6mm screwdriver and supplied medium screws to fix surface cup to surface (alternatively, use supplied short screws only to fix to a timber surface)
8. Use chain to connect hooks

## YOUR PRODUCT

Thank you for purchasing this Factorylux product. It has been designed and made in the UK to give you many years of reliable service. Please read these user instructions carefully. All user instructions available to download at [factorylux.com](http://factorylux.com)

## WARNING

- Installation in accordance with current wiring and building regs and by a competent person only. Find an NICEIC registered contractor at [factorylux.com](http://factorylux.com)
- For indoor use only
- Bathroom installation by authorised contractor only
- Shut off power to the circuit before installation
- Surface cup must be earthed
- Grommet enhances insulation and protection
- Ensure grub screw is secure - WAGO terminals must be relieved from strain and twisting
- Always use fixings appropriate for the mounting surface (screws supplied may not be suitable)
- Hook max weight load 10kg
- Always consider the total weight load when installing and suspending your light
- Ensure luminaire cord is min 0.75mm<sup>2</sup> CSA and double insulated

## TROUBLESHOOTING

No user serviceable parts. In the event of failure, fault or damage shut off power and contact our technical department via [factorylux.com](http://factorylux.com)


## STAY UP TO DATE

We post regular design and product information via social media and our blog. You can also contact us via instant support, twitter or email [hello@factorylux.com](mailto:hello@factorylux.com)



## WIRING DIAGRAM

**WARNING:** Ensure no loose copper strands

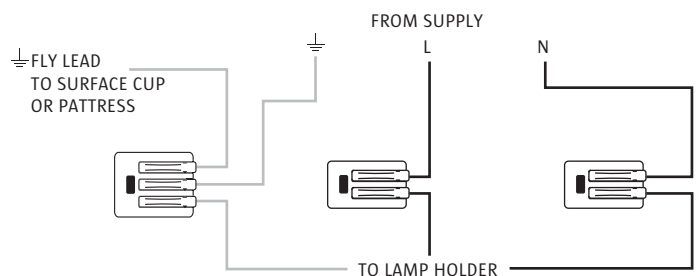

## HANDLING & CLEANING

**WARNING:** Shut off power and allow to cool

- Wipe gently with a dry, soft, cotton cloth
- Cleaning products, scratching, abrasion, damp, oils, liquids etc may have a detrimental effect

Designed & made in the UK

Revision 1602