



FACTORYLUX[®]

IP54 PATTRESS

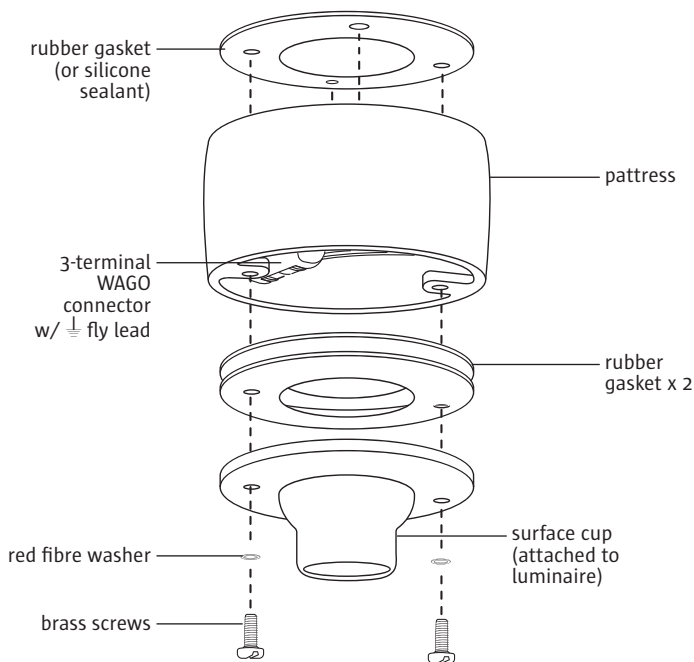

WHAT'S INCLUDED

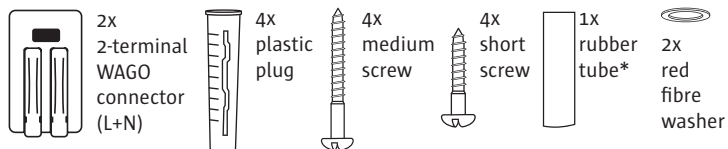

* required for other Factorylux Modular installations

TOOLS REQUIRED

- Drill + 6mm masonry bit
- 6mm flat head screwdrivers
- 24mm + 26mm open spanner

INSTALLATION NOTES

- Instructions are for pattress installation only
- Follow light fitting user instructions to complete installation

INSTALLATION (MASONRY SURFACE)

WARNING: Must be insulated and earthed in accordance with current regs

1. Drill 6mm holes x 30mm deep using mounting holes as a template
 2. Insert plastic plugs into holes
 3. If mounting surface is smooth, place rubber gasket over fixing holes. If not smooth, use silicone sealant instead to create an impermeable seal between pattress and surface
 4. Use screwdriver and supplied medium screws to fix pattress to the surface (alternatively, use supplied short screws only to fix to a timber surface)
 5. Use supplied WAGO connectors to make L, N and \perp connections (as per 'wiring diagram')
- Flip integrated orange lever up to open position
 - Insert exposed conductor to stopping point
 - Return lever to closed position
6. Secure surface cup to pattress using brass screws, ensuring all rubber gaskets are in place. **CAUTION:** Hand tight only. Over tightening could damage gasket or washers. Under tightening will allow water ingress.

YOUR PRODUCT

Thank you for purchasing this Factorylux product. It has been designed and assembled in the UK to give you many years of reliable service. Please read these user instructions carefully. All user instructions available to download at factorylux.com

WARNING

- Installation by a competent person, in accordance with current building and wiring regs. Find an NICEIC registered contractor at factorylux.com
- Rated IP 54
- Shut off power to the circuit before installation
- Ensure all rubber gaskets are in position, failure to install correctly could affect IP rating
- Do not remove sealant used during manufacture. Removal could affect IP rating
- Always use fixings appropriate for the mounting surface (screws supplied may not be suitable)


STAY UP TO DATE

We post regular design and product information via social media and our blog. You can also contact us via instant support, twitter or email hello@factorylux.com



WIRING DIAGRAM

WARNING: Ensure no loose copper strands

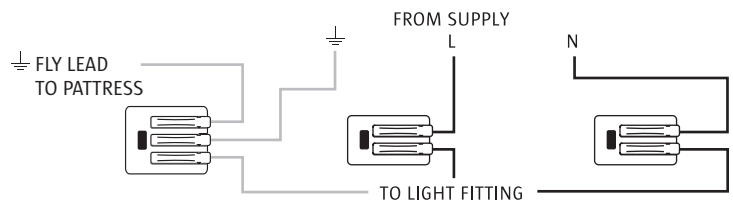

HANDLING & CLEANING

WARNING: Shut off power and allow to cool

- Wipe gently with a dry, soft, cotton cloth
- Cleaning products, scratching, abrasion, damp, oils, liquids etc may have a detrimental effect on finish

TROUBLESHOOTING

No user serviceable parts. In the event of failure, fault or damage shut off power and contact our technical department via factorylux.com

Designed, made & tested in the UK to BS EN 60598

1_INS_IP54Pattress_1903

© Factorylux. All rights reserved. Factorylux is a registered trade

mark. Factorylux | Greenhill Mills | Hebden Bridge | HX7 5QF | United Kingdom

