



FACTORYLUX®

HOOKED PATTRESS TYPE 5

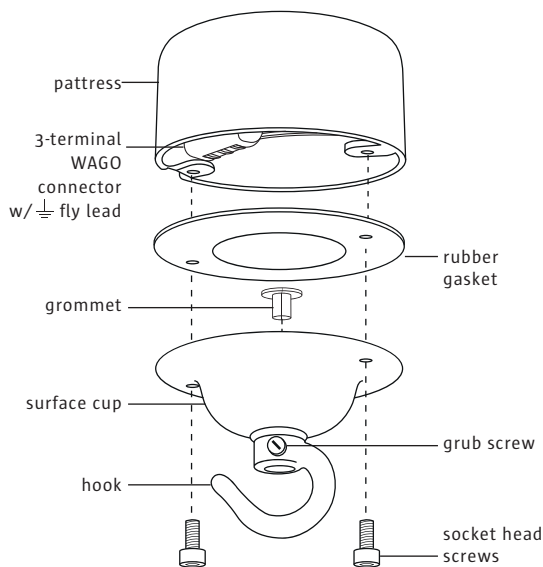

retro silver S281300 | vintage brass S281400 | antique bronze S281500

WHAT'S INCLUDED

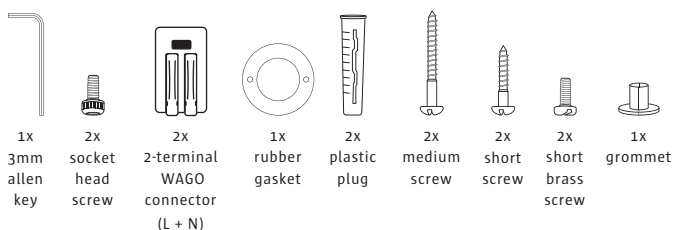

YOUR PRODUCT

Thank you for purchasing this Factorylux product. It has been designed and made in the UK to give you many years of reliable service. Please read these user instructions carefully. All user instructions available to download at factorylux.com

WARNING

- Installation in accordance with current wiring and building regs and by a competent person only. Find an NICEIC registered contractor at factorylux.com
- For indoor use only
- Bathroom installation by authorised contractor only
- Shut off power to the circuit before installation
- Grommet enhances insulation and protection
- Ensure grub screw is secure - WAGO terminals must be relieved from strain and twisting
- Always use fixings appropriate for the mounting surface (screws supplied may not be suitable)
- 10kg max weight load from hook
- Ensure luminaire cord is min 0.75mm² CSA and double insulated
- Adhere to 'looping in wiring diagram' where applicable

TROUBLESHOOTING

No user serviceable parts. In the event of failure, fault or damage shut off power and contact our technical department via factorylux.com

STAY UP TO DATE

We post regular design and product information via social media and our blog. You can also contact us via email, instant support or twitter. Our system is efficient - response times are measured in minutes, not hours.



FACTORYLUX®

USER INSTRUCTIONS

TOOLS REQUIRED

- Drill + 6mm masonry bit
- 6mm + 3mm flat head screwdrivers

INSTALLATION NOTES

- Pendant combinations vary. Instructions are for ceiling rose installation only


INSTALLATION (MASONRY SURFACE)

WARNING: Must be insulated and earthed in accordance with current wiring regs

1. Drill 2 x 6mm holes x 30mm deep at 50.8mm centre spacings
2. Insert plastic plugs into holes
3. Use 6mm screwdriver and supplied medium screws to fix pattress to surface (alternatively, use supplied short screws only to fix pattress to a timber surface)
4. Feed cable through hook and secure grub screw with 3mm screwdriver
5. Slide grommet (shoulder last) over cable end and position in internal neck of hook
6. Locate rubber gasket between surface cup and pattress
7. Use supplied WAGO connectors to make L, N and \perp connections (as per 'wiring diagram'):
 - Flip integrated orange lever up to open position
 - Insert exposed conductor to stopping point
 - Return lever to closed position
8. Secure surface cup to pattress using supplied short brass screws or socket head screws (with supplied allen key)
9. Use chain to connect hooks

WIRING DIAGRAM

WARNING: Ensure no loose copper strands

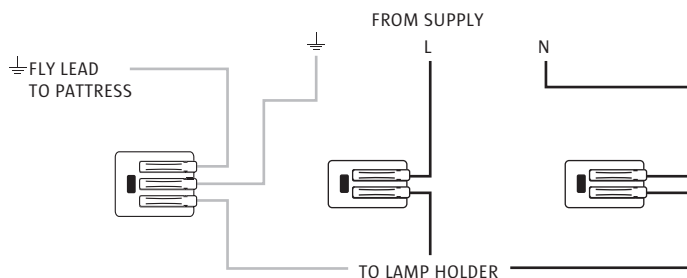

HANDLING & CLEANING

WARNING: Shut off power and allow to cool

- Wipe gently with a dry, soft, cotton cloth
- Cleaning products, scratching, abrasion, damp, oils, liquids etc may have a detrimental effect

Designed & made in the UK
Revision 1602