


# FACTORYLUX®

## OVAL BULKHEAD

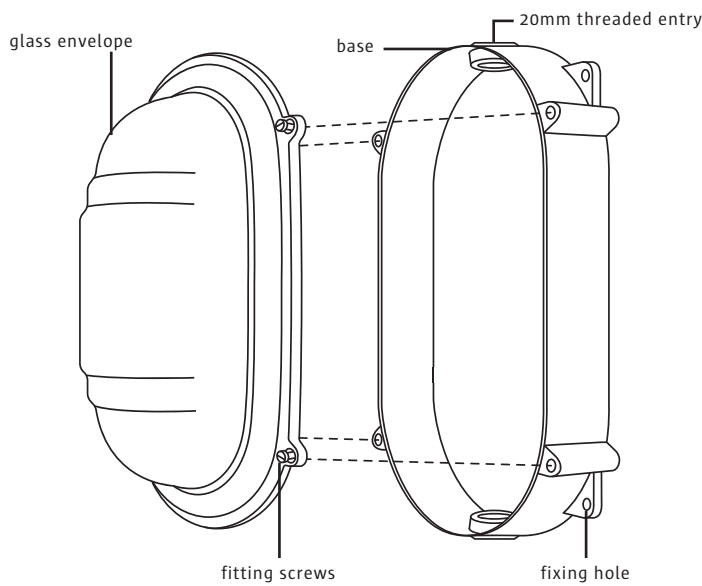

SKU S306910-N

### WHAT'S INCLUDED



4x  
plastic  
plug



4x  
medium  
screw



4x  
long  
screw

# FACTORYLUX®

## USER INSTRUCTIONS

### TOOLS REQUIRED

- Drill + 6mm masonry bit
- Fixing & fitting screws      6mm flat head screwdriver
- L & N Terminal                      3mm flat head screwdriver
- ⚡ terminal                              cross-head screwdriver
- Lamp holder bracket              cross-head screwdriver

### INSTALLATION NOTES

- 20mm threaded entry hole requires securing to a suitable 20mm male threaded cable outlet (i.e conduit or compatible gland)
- We recommend using ferrules with crimping pliers to crimp exposed stranded conductors. It's simpler, neater and safer
- We recommend using suitable thread-locking fluid to prevent loosening of 20mm female thread from connected parts

### INSTALLATION (MASONRY SURFACE)

**WARNING:** Light fitting to be installed and earthed in accordance with current wiring and building regs

1. Disassemble light fitting
2. Remove lamp holder from bracket
3. Place base against mounting surface and mark 4x hole centres
4. Drill 4 x 6mm holes x 30mm deep
5. Insert plastic plugs into holes
6. Remove plastic bung to reveal 20mm threaded entry hole and attach chosen cable outlet
7. Pull supply cable through entry hole into body
8. Fix base to mounting surface using supplied long fixing screws (alternatively, use supplied medium screws only to fix to a timber surface)
9. Make L, N and ⚡ connection (see 'wiring diagram')
10. Secure lamp holder to bracket (if removed)

### YOUR PRODUCT

Thank you for purchasing this Factorylux product. It has been designed and hand built in the UK to give you many years of reliable service. Please read these user instructions carefully. All user instructions available to download at [factorylux.com](http://factorylux.com)

### WARNING

- Installation in accordance with with current wiring & building regs and by a competent person only. Find an NICEIC registered contractor at [factorylux.com](http://factorylux.com)
- Rated IP 65
- IP rating may be reduced if installed incorrectly or with unsuitable parts
- Earthed - only compatible with 3 core cable
- Shut off power before installation, adjusting or handling
- Ensure cables are secured in correct terminals (see 'wiring diagram')
- Consider cord anchorage - terminals must be relieved from strain and twisting
- Do not exceed wattage specified on product label (for Factorylux filament lamp exceptions - contact [hello@factorylux.com](mailto:hello@factorylux.com))
- Light bulbs with higher thermal output may impair safety
- Bathroom installation by authorised contractor only
- Always use fixings appropriate for your mounting surface (screws supplied may not be suitable)

### TROUBLESHOOTING

No user serviceable parts. In the event of failure, fault or damage shut off power and contact our technical department via [factorylux.com](http://factorylux.com)

### STAY UP TO DATE


We post regular design and product information via social media and our blog. You can also contact us via instant support, twitter or email [hello@factorylux.com](mailto:hello@factorylux.com)



### INSTALLATION CONTINUED

11. Insert lamp and check function
12. Fit glass cover to body and secure with fitting screws **CAUTION:** ensure rubber gasket positioned correctly and screws firmly secured

### WIRING DIAGRAM

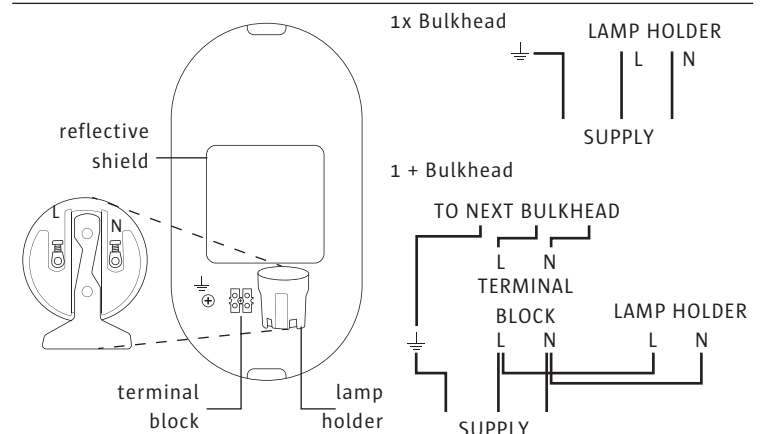

**CAUTION:** When running wiring to an additional bulkhead ensure cables run under reflective shield

### HANDLING & CLEANING

**WARNING:** Shut off power and allow to cool

- Wipe gently with a dry, soft, cotton cloth
- Cleaning products, scratching, abrasion, damp, oils, liquids etc may have a detrimental effect

Designed & made in the UK to BS EN 60598

Revision 1603

